

ALARM LIST

KIAVFUKT.mcxs

CODE	DESCRIPTION	ENABLE	RESET	PERIOD	START UP	STEADY	ACTIVE IN OFF	ALARM RELE'	WARNING RELE'	BUZZER	CIRCUIT SYSTEM	COMPRES SORS	PUMP/F. EVAP.	FAN/P. COND.	HEATERS	ADU
A01	General alarm	1	-1	60	0	0		X			NO	-	-	-	-	1901 .08
E01	Temp Sensor Fault	1	-1	60	25	0		X			NO	-	-	-	-	1901 .09
E02	Hum Sensor Fault	1	-1	60	25	0		X			NO	-	-	-	-	1901 .10
E03	Defrost Sensor Fault	1	-1	60	25	0		X			NO	-	-	-	-	1901 .11
E04	HP Sensor Fault	1	-1	60	25	0		X			NO	-	-	-	-	1901 .12
A02	HP Switch/Fan	1	0	60	5	0		X			NO	-	-	-	-	1901 .13
A03	LP Switch	1	-1	60	5	0		X			NO	-	-	-	-	1901 .14
A04	Motor Protection	1	-1	60	5	0		X			NO	-	-	-	-	1901 .15
A05	High Pressure	1	-1	60	25	0		X			NO	-	-	-	-	1901 .00
A06	Heater Protection	1	0	60	25	0		X			NO	-	-	-	-	1901 .01
A07	Filter Alarm	1	-1	60	5	0		X			NO	-	-	-	-	1901 .02
E06	LP Sensor Fault	1	-1	60	25	5		X			NO	-	-	-	-	1901 .03
E05	EXD Com Error	1	-1	60	25	10		X			NO	-	-	-	-	1901 .04
A10	Low Pressure	1	-1	60	25	0		X			NO	-	-	-	-	1901 .05
A11	High Pressure	1	-1	60	25	0		X			NO	-	-	-	-	1901 .06
E07	S2 Sensor Fault	1	-1	60	25	5		X			NO	-	-	-	-	1901 .07
E08	Fan Overheat	1	-1	60	5	0		X			NO	-	-	-	-	1902 .08
A90	Gateway COM Error	1	-1	60	50	20		X			NO	-	-	-	-	1902 .09
A91	Gateway Network Error	1	-1	60	50	20		X			NO	-	-	-	-	1902 .10
A12	High Ambient	1	-1	60	20	0		X			NO	-	-	-	-	1902 .11
A13	Low Ambient	1	-1	60	20	0		X			NO	-	-	-	-	1902 .12
A14	High Humidity	1	-1	60	20	0		X			NO	-	-	-	-	1902 .13
A15	Low Humidity	1	-1	60	20	0		X			NO	-	-	-	-	1902 .14
A16	High Dewpoint	1	-1	60	20	0		X			NO	-	-	-	-	1902 .15
A17	Low Dewpoint	1	-1	60	20	0		X			NO	-	-	-	-	1902 .00